



# Indio DJ Booth Assembly Instructions

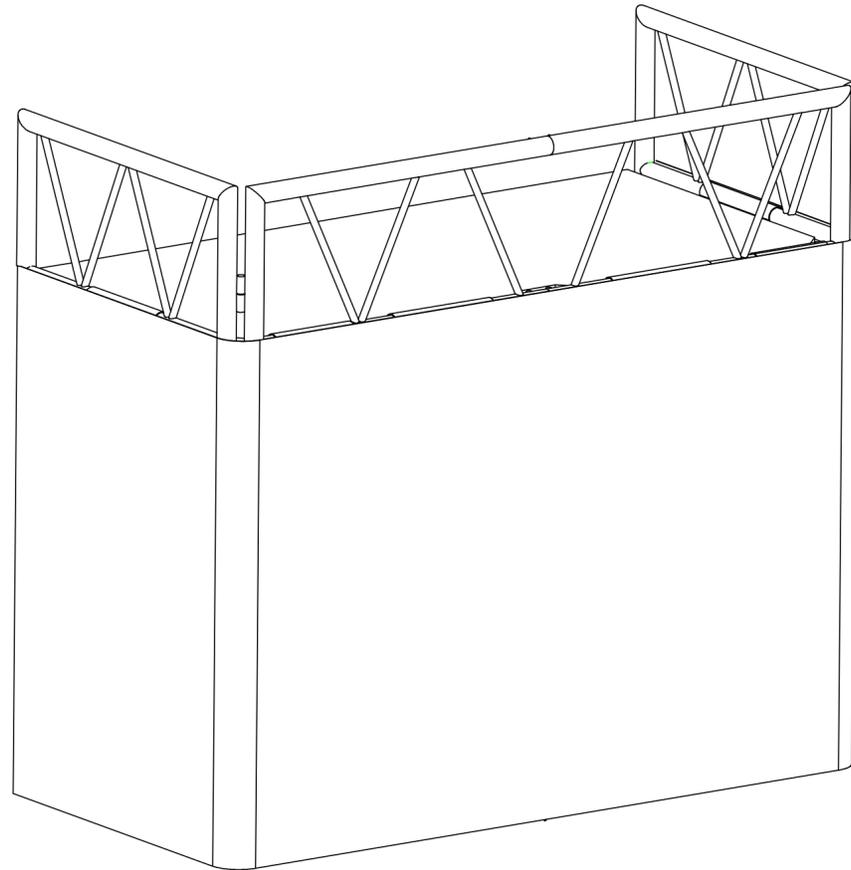


**3**

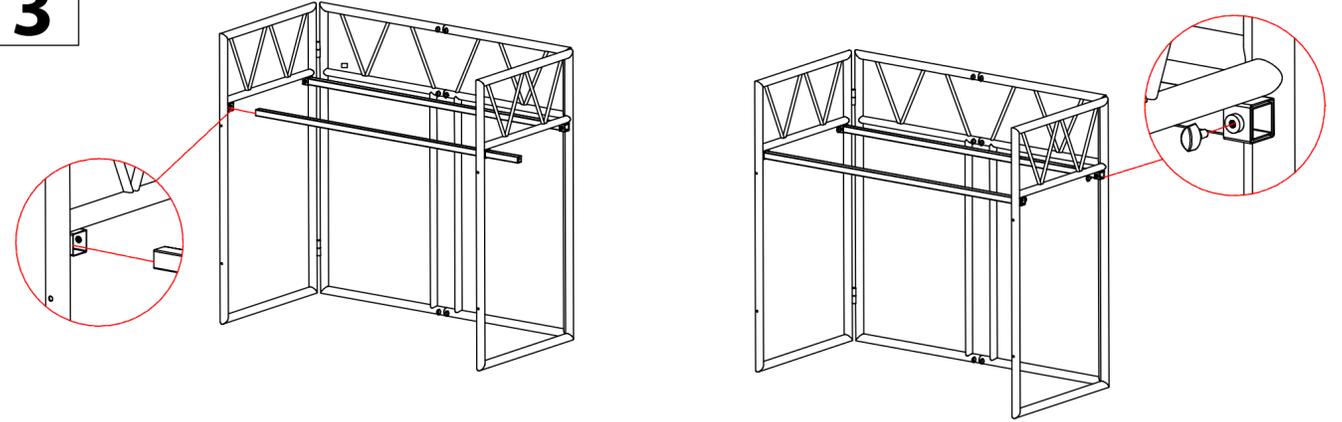

**Crossbars Assembly**

Orient the crossbars with the Velcro side up, and the side with the screw holes facing the screw holes on the crossbar fittings. Insert the crossbars into the right panel fittings and slide into the left panel fittings as shown above. Line up the screw holes and tighten the wing bolts to secure the crossbars on both ends.


**4**

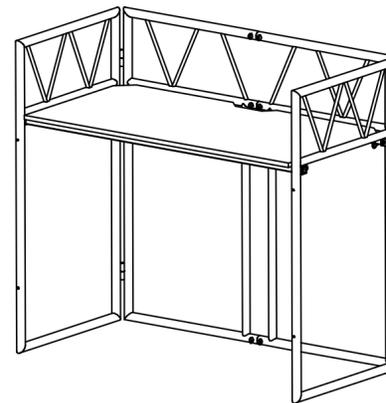

**Counter-top Placement**

Place the counter-top onto the crossbars, making sure the side with the cable cutouts is facing towards the front panel. The frame and work surface are now assembled. Take a moment to make sure all the bolts are tightly fastened. *We've included a few cables ties to keep your booth clean and organized. Use them to run cables down the center or side vertical tubes.*


**5**

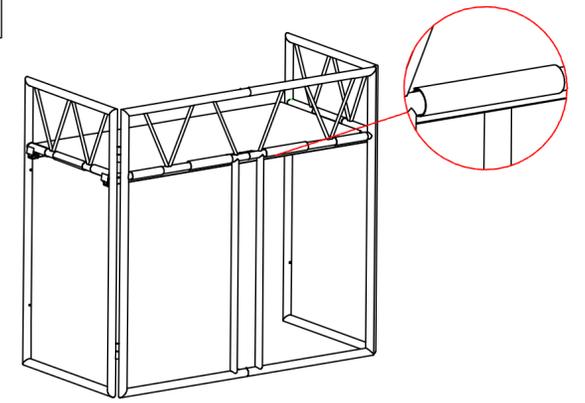

**Scrim Attachment**


The included white Velcro strip will need to be cut into (10) short pieces - using scissors or a blade - to fit within each truss section as shown above. Measure each section and cut accordingly. Once cut to size, wrap the Velcro pieces onto the aluminum tube, with hook side facing out.

**6**

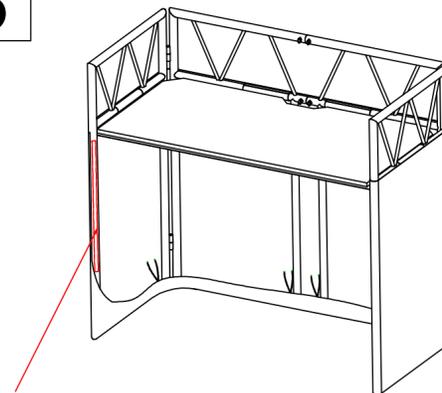


Find the two fitted corners of the scrim. These will run under the corners of the side panels. Starting from either side, carefully run the scrim under booth and attach the Velcro on the inside of the side panel as shown above, working your way up to the top. Continue working your way around the booth, lifting as you go to run the scrim under the booth and sticking the Velcro around the top.

**7**

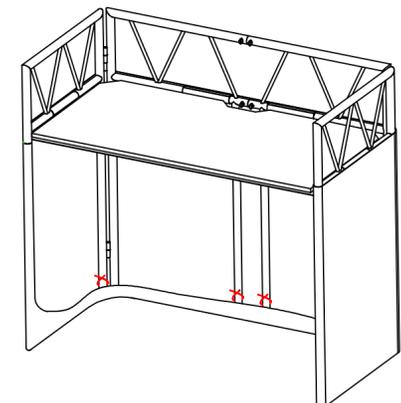

Once you've gone all the way around, you may need to readjust the scrim until it's all lined up and stretched. There are (4) ties sewn into the bottom of the scrim. Use these to tie the scrim to the panels for maximum stretch. Reverse the process to disassemble the booth.


**1**

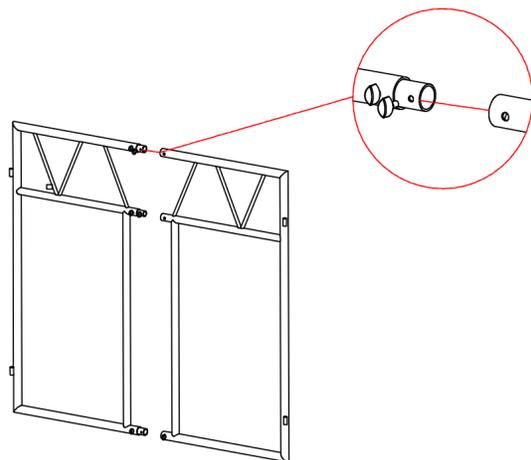

**Front Panel Assembly**

Insert the (3) center tube fittings and tighten the wing bolts on each end of the fittings. *Note that the middle tube is slightly smaller than the top and bottom fittings.*

**2**

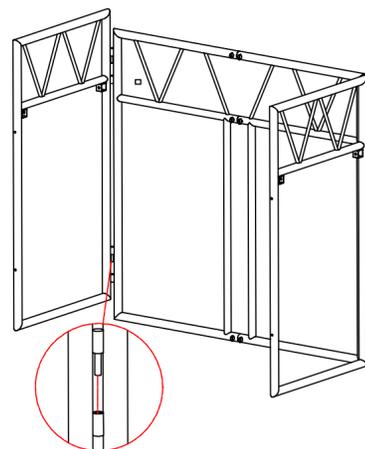

**Side Panels Assembly**

With the front panel propped up, lift the side panel, align hinges above the front panel hinges and slide down to insert the hinge pins. *If moving the booth at this stage, carefully lift the front and side panels together (preferably with someone else) to keep the hinges from coming out.*